



FlashLink® PDF Elite In-Transit Temperature and Humidity Loggers

Model 40050-05 FlashLink PDF Elite Temperature Logger
Model 40051 FlashLink PDF Elite Temperature and Humidity Logger

FlashLink PDF Elite In-Transit Loggers are cold chain management solutions for monitoring products that are sensitive to temperature and humidity as they move through the supply chain. They are ideal for domestic routes and import/export operations, on all modes of transportation: air, truck, rail or ocean containers.

These single-use devices feature a built-in USB connector and onboard software which automatically creates PDF and CSV trip reports when plugged into a PC or the USB port of a printer. Onboard software is particularly important when products are shipped to remote locations so that receivers have quick and easy access to trip reports as soon as cargo arrives.

No cradles, reading devices or adapters are required for downloading trip data. Secure, encrypted PDF reports can be emailed for sharing with other stakeholders and saved on a local hard drive for quality assurance and traceability in compliance with HACCP, FSMA, GDP, as well as local and global regulatory agencies.

The FlashLink PDF Elites are highly accurate loggers that include a broad array of innovative and user-friendly features such as a large, easy-to read LCD.

FlashLink PDF Elite Logger

FlashLink PDF Elite
 MDL 40051
 66701094 Apr 07/24 GMT 0

SHIPPER INSTRUCTIONS

- Press and hold the green START button until the check down beam or temperature reading appears.
- Remove paper from front surface; stick on the back of the card.
- Place logger on top of pallet or package to be shipped; hold button half an hour down over edge of box to indicate location of the logger.

INSTRUCCIONES DEL CARGADOR

- Mantenga presionado el botón verde de START hasta que aparezca el temporizador de cuenta regresiva o la lectura de temperatura.
- Retire el papel protector de las tiras adhesivas en la parte posterior de la tarjeta.
- Coleque el registrador en la parte superior del pallet o el paquete que se envía; coloque la mitad inferior de la tarjeta hacia abajo sobre el borde de la caja para indicar la ubicación del registrador.

RECEIVER INSTRUCTIONS

- Remove logger from card. Press and hold STOP button until STOP appears on LCD without flashing.
- Press START button to see trip statistics and alarm information; a new statistic appears with each button press.
- Plug into USB port of computer. Wait until USB appears on the LCD; then PDF and CSV reports are ready.

INSTRUCCIONES DEL RECEPTOR

- Retire el registrador de la tarjeta. Mantenga presionado el botón STOP hasta que STOP aparezca en la pantalla LCD sin parpadear.
- Presione el botón START para ver las estadísticas del viaje y la información de alarma; un nuevo dato estadístico aparece cada vez que se presiona el botón.
- Conecte el puerto USB de la computadora. Espere hasta que aparezca "USB" en la pantalla LCD; luego los informes PDF y CSV están listos.

ATTENTION DATA LOGGER HERE

CAUTION: If you use a Shadow Log that only data logging mode, do NOT push START button. Download logger to PC to recover Shadow Log file. If the logger is in the LCD screen, it will not temperature reading. For temperature recording, it will not LED will be flashing.

PRECAUCIÓN: Si se usa el modo de Shadow Log que solo datos de registro, NO presione el botón de START. Descargue el registrador a la PC para recuperar los datos de Shadow Log. Si el registrador está en la pantalla LCD, no se leerá la temperatura. Para la grabación de temperatura, no se encenderá el LED.

DeltaTrak
www.deltatrak.com

Scan for more information

The LCD is a key benefit for receivers to review trip statistics from recorded data and make quick accept/reject decisions on the dock without having to download trip reports.

Users can easily toggle between °F and °C on the LCD, and the logger memory holds up to 32,000 data points - twice as much as what is offered by competitors.

Flashlink PDF Elite Loggers are equipped with DeltaTrak's patented Shadow Log® technology, guaranteeing that receivers will have trip data even if a shipper inadvertently forgets to start the device. This is critical when a load arrives in bad condition; without Shadow Log® there would be no trip report to indicate where and when temperature abuse occurred and no evidence to determine who is at fault for insurance claims purposes.

Additional Features:

- Free Configurator software available for users to program logging parameters before activation, including low/high alarms, logging interval, start delay, and temperature scale.
- Recorded data automatically scales to graph on PDF report
- Embedded Calibration Certificate available upon request

