

Installation Instructions



FlashLink Data Manager Software Download and Installation

FlashLink Data Manager automatically creates an Adobe® PDF report from the information recorded on any FlashLink data logger. Once installed on your Windows PC, it runs in the background and automatically detects when a logger is connected to the USB port. The FlashLink Mini, FlashLink VU and FlashLink CT -80°C Loggers require the FlashLink 8-Pin to USB High Speed Adapter. Reports are stored on the PC as PDF and CSV files, which can be emailed or printed for permanent record-keeping, audits and verification of compliance.

1. Open a web browser and go to **www.deltatrak.com** website.
2. Locate the main menu at the top of the web page under the DeltaTrak company logo and then select **Support** in the menu.
3. Scroll down to **Software and Drivers** in the menu and click this selection.
4. Select your geographic location on the map shown.
5. Scroll down to **FlashLink Data Manager - Free**, then click on the image of the logger you're using. Click the software download button (for 8-pin loggers, choose to **Download Software Only**, or order an **8-Pin to USB Adapter** with your software download).
6. Fill out the form and click on the **Submit** button at the bottom of the form.
7. On the next screen, please take note of the phone number for Technical Support and click on **Download** in the center of the screen.
8. On the next screen, select the location where you will save the download file and click **Save** to start your download.
9. When the download is completed, navigate to the location on your computer where you saved the download file.
10. Double click the **FlashLink_Data_Manager.zip** file. A new window will open.
11. Right click the **FlashLink X.X.X Data Manager Setup.exe** file and select **Run as administrator**.
12. When the Welcome screen is displayed, the installation process will guide you through the remaining steps for the software installation.
13. The software will run in the background, and become active when a compatible logger is inserted in the USB port.
14. Right-click on the **FlashLink** icon in the system tray to select **Options, Data Analysis, About, Update, or Exit**.

Help File

Please read the **Help** file before getting started. The Help system can be accessed by a single right click on the FlashLink icon in the system tray and selecting **About** from the pull down menu.

Operating System Requirements

Windows 10, Windows 7, 32 bit or 64 bit computers.

Hardware Requirements

1 gigahertz (GHz) or faster 32-bit (x86) or 64-bit (x64) processor
1 gigabyte (GB) RAM (32-bit) or 2 GB RAM (64-bit)

Device Compatibility

Any FlashLink Data loggers.

Other Software Requirements

Adobe Acrobat Reader 8.0 or greater

